

My Player Guide



Speaker on/off

Battery Level

Slide switch down to power on

Select Music then Albums then select your chosen playlist

Menu Back Button

Go Back a Track

Select a Track

Speaker on or off

Volume Up

Volume Down

Forward a Track

PAUSE / PLAY

ZEN

How to use the player

Step 1. Power on, by holding down the switch on the top right hand side of the player (The screen should light up and after a second will display the menu.)

Step 2. Press the “menu back button” (top left) until the screen has “menu” displayed at the top

Step 3. Select “music” using the up and down arrows and press the “select centre button” to confirm

Step 4. Select “albums” using the up and down arrows and press the “select centre button” to confirm

Step 5. Select your tour – it’s as easy as that!

As you start the tour remember you can skip forward, back or pause using the buttons as shown in the illustration.

Enjoy your tour and let us know how you got on!

www.mytourtalk.com

My Player Guide



Speaker on/off

Battery Level

Select Music then Albums then select your chosen playlist

Volume Up

Menu Back Button

Go Back a Track

Select a Track

Speaker on or off

Volume Down

Forward a Track

PAUSE / PLAY

ZEN

How to use the player

Step 1. Power on, by holding down the play / pause button, bottom right of the player (The screen should light up and after a second it will go to the main menu screen.)

Step 2. Press the “menu back button” (top left) until the screen has “menu” displayed at the top

Step 3. Select “music” using the up and down arrows and press the “select centre button” to confirm

Step 4. Select “albums” using the up and down arrows and press the “select centre button” to confirm

Step 5. Select your tour – it’s as easy as that!

As you start the tour remember you can skip forward, back or pause using the buttons as shown in the illustration.

Enjoy your tour and let us know how you got on!

www.mytourtalk.com